

## REMOTE CONTROL FOR ELIMINATING QUEUES IN PLASTIC FRAME COMPLETE WITH BATTERIES

REMOTE CONTROL WITH LED AND FORWARD BUTTON



vedi prodotto online

CODICE: 0191005630602



# SOLUZIONI FOODSERVICE

Remote control with LED complete with batteries.

## USE

- To advance the number, press the central advance button
- To reset the display, press button "C" for three seconds
- To turn off the visor, press the on-off button for three seconds