

SENO&SENO LIMESCALE DESCALER TANK 6kg

PACKAGE 6 Kg. ACID SENO&SENO DESCALER FOR DISHWASHER



vedi prodotto online

CODICE: **059003908010D**

MARCA: **Chef secret**



SOLUZIONI FOODSERVICE

APPLICATIONS

SENO&SENO descaler is an acid descaler for dishwashers.

With its concentrated formula it quickly dissolves encrustations and restores the original shine.

Regular use helps keep your dishwasher in optimal condition.

Odor-free product to make use more pleasant.

Suitable for descaling industrial dishwashers and kitchen equipment.

Do not use on copper, zinc, porous enamel or marble.

ADVICE ON USE

Before use it is recommended to always wear gloves and protective glasses.

Remove the dishes and empty the water from the machine and then fill it with water.

Depending on the degree of encrustation, pour 5-25 ml/L of product into the machine, if necessary spray in the rinse area and wipe with a wet cloth or sponge.

Start the machine and run it for 10-30 minutes (without using any other detergent).

Stop the machine and drain the water and used product.

Restart the machine and fill the tub with clean water.

Reactivate the detergent dispenser.

PRODUCT READY TO USE.

Dosage:

From 5 to 25 ml/L depending on

PRECAUTIONS FOR USE

Avoid impacts and improper handling of the packages which can cause the product to leak.

After use, close the container and store away from heat sources. The product is not flammable.

The product is not flammable.